

Connecting Automation Devices

Connect the Relay controller (KC868-H32B) , Logical Controller (KC868-COL B) and Switch Terminal board using RS232 cable as shown below.

Connect the Switches (Self reset switches) to the switch terminal board as shown below. In case you need more detailed information on the connectivity of the switches, refer to the next page.

